


Aerosol Refill

Installation Instructions

1

Switch the dispenser to the "Off" position.

2

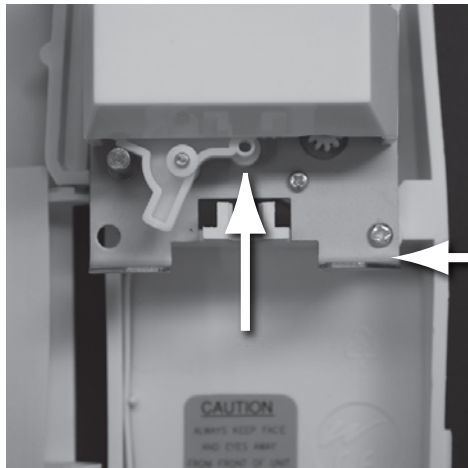


Push the white can actuator all the way up as shown above.

3

Locate the mounting bracket in the dispenser, shown above. The can must be pressed into the bracket.

4

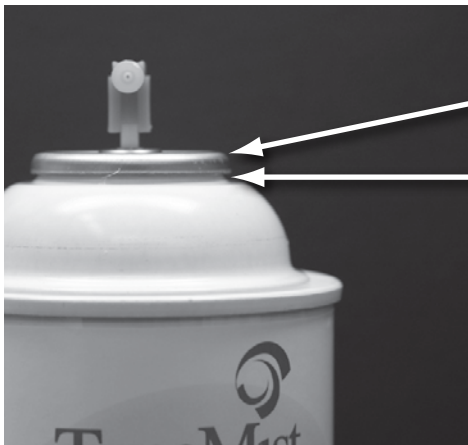

Locate the silver neck ring on the can. The dispenser bracket will press into the slot below the silver neck ring.

5



Firmly press and/or twist the can into the dispenser so the bracket slides into the slot, under the silver neck ring. The silver neck ring of the can must be against or very close to the back surface of the bracket.

6

Make sure your face is away and off to the side of the spray tip on the can, then turn the dispenser on and close the cover.

7

The dispenser will spray once, approximately 10 seconds after the power switch is moved to the on position.

8

The dispenser will now cycle based on the dispensers settings.

Note: The dispenser must be in the off position when changing the batteries.